














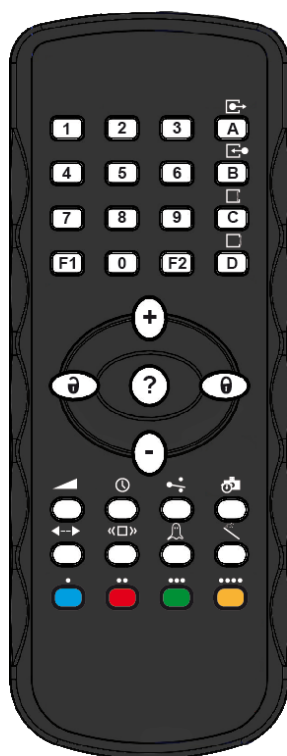
# REMOTE CONTROL

## How to use the remote control?













### KEYS

#### PARAMETERS


-  External monitoring / test
-  IR-detection field
-  Uncovered zone
-  Mounting height / Frequency
-  Output redirection
-  Door control
-  Detection field size
-  Hold time
-  Detection mode
-  Radar immunity filter
-  Output configuration
-  Max. duration of presence detection
-  IR-immunity filter







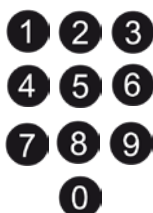

#### Laser Scanner

-  Field dimensions - optional - width
-  Field dimensions - optional - height
-  Field dimensions - safety - width
-  Field dimensions - safety - height
-  Detection field redirection
-  Uncovered zone
-  Object size
-  Output activation delay
-  Active curtains
-  Mounting side
-  Output configuration
-  Immunity filter





#### VALUES



#### GENERAL KEYS

-  Unlock
-  Lock
-  Check value
-  Increase by 1
-  Decrease by 1
-  Setup / Teach-in  
Factory values  
Presettings

#### COLOUR KEYS

	Flatscan	Widescan
	/	Virtual pull cord
	Safety	Safety
	Movement	Reopening
	/	Presence

## USE



After unlocking, the red LED flashes and the sensor can be adjusted by remote control.



If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.

 


To end an adjustment session, always lock the sensor.

### ADJUSTING ONE OR MORE PARAMETERS




### CHECKING A VALUE




X = number of flashes = value of the parameter

### RESTORING TO FACTORY VALUES

 


\* When no green LED is available, the signal is red.

### SAVING AN ACCESS CODE

 


The access code (1-4 digits) is recommended to set sensors that are installed close to each other.

### CHANGING AN ACCESS CODE

 


Enter the existing code

### DELETING AN ACCESS CODE

 

Enter the existing code

 If you forget the access code, proceed as follows:



Unpower & power the sensor

During 1 minute, you can access the sensor without access code



LED flashes quickly



LED flashes once



LED flashes



LED is off



LED flashes slowly

