






4SAFE

Remote control settings

-  Unlock
-  Lock
-  Select one module (LED of selected module flashes)
Without pushing +, all modules are adjusted simultaneously.

-  0 Launch setup
-  9 Factory values 4SAFE SW
- Factory values 4SAFE REV

DIP 1 Relay redirection*

ON

OFF

1	R1	R1	R1	R1	TX
2	R2	R2	R2	R2	TX
3	R2	R2	R1	R1	TX
4	R1	R1	R2	R2	TX

R1= Relay 1
R2= Relay 2

Output configuration

	Relay 1	Relay 2
1	active	passive
2	passive	active
3	passive	passive
4	active	active

Detection hold time

0	0.3 s	5	5 s
1	1 s	6	6 s
2	2 s	7	7 s
3	3 s	8	8 s
4	4 s	9	9 s

Immunity filter

1	Normal
2	Enhanced

Number of IR-spots**

1	●	○	○	○	TX
2	●	●	○	○	TX
3	●	○	●	○	TX
4	●	●	●	●	TX
5	●	●	○	○	TX

Uncovered zone (in cm)*

	2.0 m	2.5 m	3.0 m	3.5 m
0	0	0	0	0
1	5	7	10	15
2	10	16	20	30
3	15	24	30	46
4	20	30	40	57
5	25	35	51	69
6	30	43	61	79
7	35	52	71	91
8	40	62	81	104
9	45	72	91	118

■ = Not recommended

Max. presence detection time

0	30 s	4	10 min
1	1 min	5	20 min
2	2 min	6	60 min
3	5 min	9	infinite

* The DIP-switch has to be switched to ON in order to change the setting by remote control

** After changing a setting, the LED flashes orange and a new calibration has to be launched (short push on the push button).