

LZR[®] - FLATSCAN REV PZ recessed

COMPACT LASER SCANNER FOR THE SAFETY OF REVOLVING DOORS (RECESSED MOUNTING)


User's Guide for product version 0200 and higher



DESCRIPTION



The LZR®-FLATSCAN REV PZ is a safety sensor for automatic revolving doors based on laser technology. It secures the area in front of the leading post of the drum wall (pinch zone). To do so, the sensor must be installed in the canopy of the door.

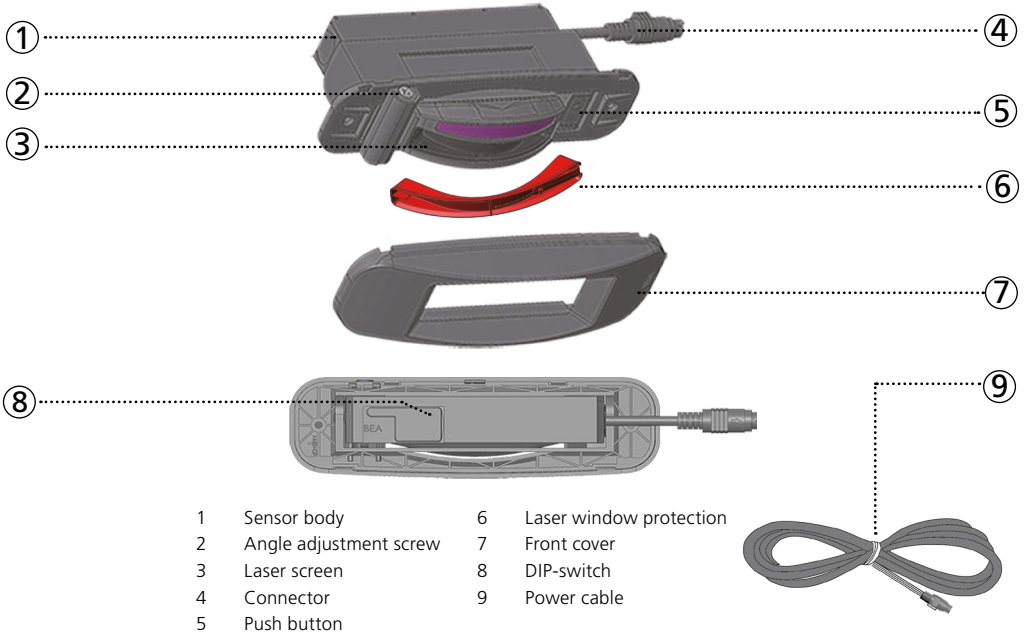


ACCESSORY (OPTIONAL)



Spacer accessory : If the FLATSCAN REV PZ does not entirely fit into your door canopy, use the spacer to hide the prominent part.


LED-SIGNALS

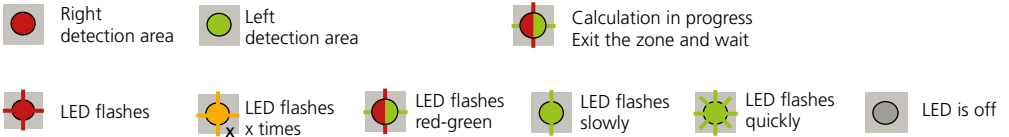

SYMBOLS



SAFETY TIPS

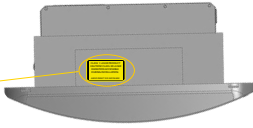

The device contains 2 visible laser beams that can be activated during the installation process to adjust precisely the position of the detection field. Do not look directly into these red beams or laser emitters (Class 3R). The visible laser beams are inactive during normal functioning.




CAUTION!


Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



The door control unit and the door cover profile must be correctly earthed.

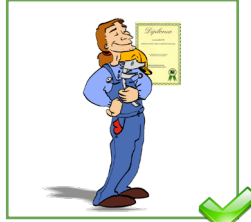

Only trained and qualified personnel may install and adjust the sensor.

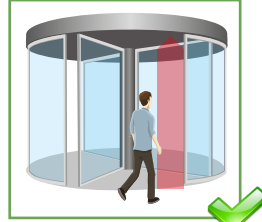


Test the good functioning of the installation before leaving the premises.


INSTALLATION AND MAINTENANCE



Avoid extreme vibrations.

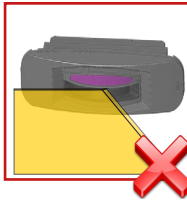


Do not cover the front screens. Remove the laser window protection before use.

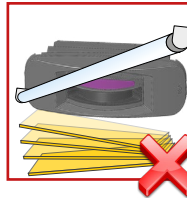


Avoid moving objects and light sources in the detection field.




Avoid the presence of smoke and fog in the detection field.

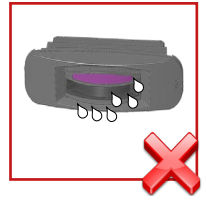

Avoid condensation.

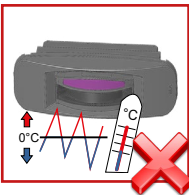


Avoid exposure to sudden and extreme temperature changes.

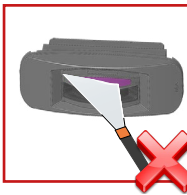


Avoid direct exposure to high pressure cleaning.



Do not use aggressive products to clean the front screen.

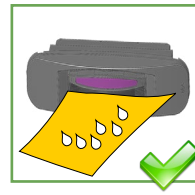

When needed, wipe the laser window only with a soft, clean and damp microfibre cloth

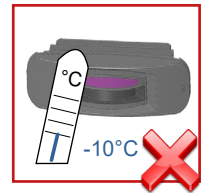


Keep the sensor permanently powered in environments where the temperature can drop below -10°C.



- The device cannot be used for purposes other than its intended use. All other uses cannot be guaranteed by the manufacturer of the sensor.
- The manufacturer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety.
- The manufacturer of the sensor cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.
- The warranty is void if unauthorized repairs are made or attempted by unauthorized personnel.

INSTALLATION

 1 DIP SWITCH

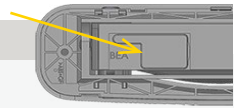

	ON	OFF	
DIP 1 OUTPUT CONFIGURATION	NC/NC	NO/NO	
DIP 2 ENVIRONMENT	standard	critical*	Switch to CRITICAL when external disturbances are likely to cause unwanted detections.
DIP 3 BACKGROUND	on	off	Switch to OFF when there is no background (e.g. glass floor).
DIP 4 MONITORING	active low	active high	
DIP 5 (NOT USED)	-	-	

* When DIP2 is OFF (critical environments), **testbody CB** (DIN 18650-1) might not be detected.




After changing a DIP-switch, the orange LED flashes.
A LONG push on the push button confirms the settings.




> 3 sec.

2 INSTALLATION OF THE SENSOR

Install the sensor at the right position and fix it with the screws.

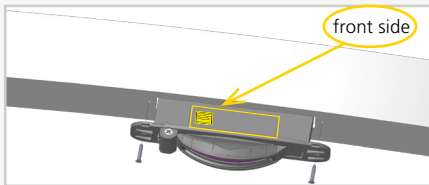


Make sure the front side of the sensor faces towards the outside of the door

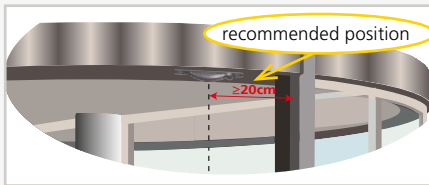

Make sure that the distance between the centre of the sensor and the leading post is not smaller than 20 cm.

3 WIRING

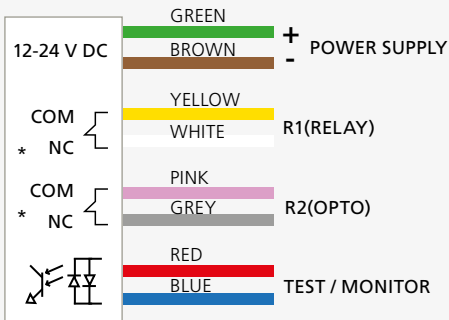

* Output status when sensor is operational.



For compliance with EN 16005 and DIN 18650-1, the door controller test output must be connected and able to test the sensor.


4 PUSH BUTTONS

Quickly press twice	to activate or deactivate the visible laser spots
Press for 2 seconds	to launch a teach-in process
Press for 3 seconds	to confirm the setting after changing the DIP switch
Press for 5 seconds	to acknowledge the 6x flashing error message and confirm that you want the sensor to be mounted higher than 4m. Note that the sensor does not comply with DIN 18650-1 and EN 16005 above this height.


ADJUSTMENTS & SETTINGS

1 VISIBLE SPOTS

Quickly press the push button twice to activate the visible spots, they will help you position the curtain.

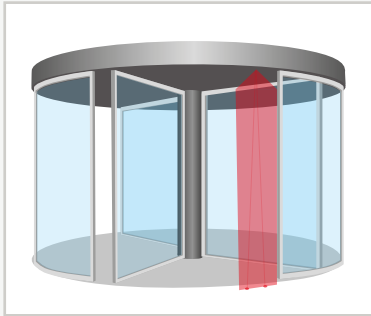

front view

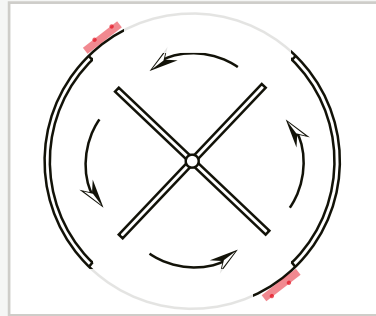




top view



Do not look directly into the visible beams !

2 CURTAIN POSITION

Quickly press twice within 1 second to show the visible spots, and then adjust the tilt angle (range: 0 to +5°) with the screwdriver until the visible spots are at the correct position.

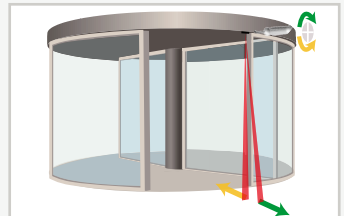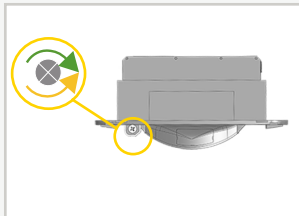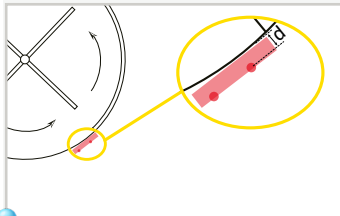

Recommended position for the visible spots:

- If 2 m mounting height: $d \geq 4\text{cm}$
- If 3 m mounting height: $d \geq 5\text{cm}$
- If 4 m mounting height: $d \geq 6\text{cm}$
- If 5 m mounting height: $d \geq 7\text{cm}$


FACTORY VALUES

3 DETECTION ZONE SETTING & TEACH-IN

Set the detection range either automatically or with the remote control:

Automatic teach-in

1. To launch a teach-in, press shortly (< 2 sec) the push button (or by remote control + +). The sensor starts flashing red-green quickly and automatically learns the installation height.
2. Wait until the sensor flashes green. Stretch out your arm in front of you and make an up and down movement to define the left/right limit of the detection field. The LED flashes red while calculating.
3. Wait until the sensor flashes green again. Stretch out your arm in front of you and make an up and down movement to define the right/left limit of the detection field. The LED flashes red while calculating.
4. Once the LED is off, the teach-in is completed.

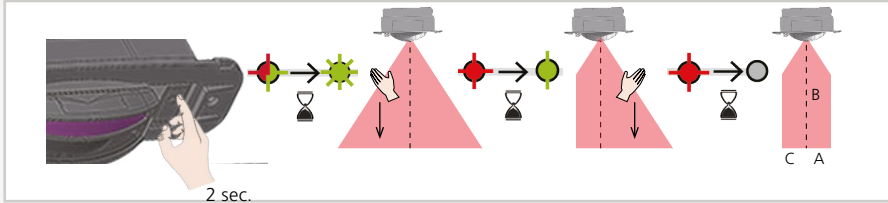

If the LED blinks orange before the teach-in completion, adjust the tilt angle of the laser curtain and launch a new teach-in.

With the remote control

Use the remote control to define the left width C and right width A, then launch an environment learning.


(+ +). LED goes off after finishing the environment process. No need to define the width of the field with your hand in this mode.

A ↔	↔	0 0 0	0 0 1	-	0 7 0	cm
no field			001	-	070	
B ↑↓	↑↓	0 0 0	0 0 1	-	5 0 0	cm
no field			001	-	500	
C ↔	↔	0 0 0	0 0 1	-	0 7 0	cm
no field			001	-	070	

h = installation height

- $h < 3.5\text{m}$, the sensor can detect testbody CA (EN 16005 & DIN 18650-1) and CB (DIN 18650-1).
- $3.5 < h < 4\text{m}$, the sensor can detect testbody CA (EN 16005 & DIN 18650-1), but the testbody CB (DIN 18650-1) might not be detected.
- $h > 4\text{m}$, the testbodies CA (EN 16005 & DIN 18650-1) and CB (DIN 18650-1) might not be detected

4 FRONT FACE

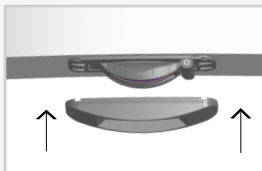

Clasp the front cover to finish the installation.



Protect the laser window in case of construction works.

PARAMETER SETTINGS

DETECTION FIELD

WIDTH (right) **A** **0 0 0** **0 0 1** **0 7 0**
no field 001 - 070 cm

HEIGHT **B** **0 0 0** **0 0 1** - **5 0 0**
no field 001 - 500 cm

WIDTH (left) **C** **0 0 0** **0 0 1** - **0 7 0**
no field 001 - 070 cm

A new teach-in overwrites these values.

OUTPUT CONFIGURATION

In order to change these settings by remote control, adjust DIP-switch 4 to ON.

	1	2	3	4	
R1 (RELAY)	NO	NC	NC	NO	NO POWER
R2 (OPTO)	NC	NO	NC	NO	NO DETECTION
					DETECTION

NO = normally open
NC = normally closed

OUTPUT REDIRECTION

	F1	0	1	2	3	4	5
R1(RELAY)	Right	Left or right	*	Left	Left or right	Left or right	Left or right
R2(OPTO)	Left	*	Left or right	Right	Left	Right	Right

* Output disabled.
** The LED is also red when a detection in both areas occurs

UNCOVERED ZONE

In order to change these settings by remote control, adjust DIP-switch 2 to ON.

	F2	1	2	3	4	5	6	7	8	9	
		2	4	6	8	10	12	14	16	18	cm*

Uncovered zone: increase in case of snow, dead leaves, etc.
*Measured in specific conditions and dependant on application and installation.
In case of false detection, button 1 and 2 are not recommended.
When DIP2 is OFF, F2 change automatically to 5 (10 cm).

! When the size of uncovered zone is greater than 6 cm, **testbody CB** from DIN 18650-1 is **NOT** detected in the grey zone.

HOLD TIME

	①	0	1	2	3	4	5	6	7	8	9	
		0.1	0.3	0.5	1	1.5	2	3	5	7	9	sec

FACTORY VALUES

HOW TO USE THE REMOTE CONTROL



After unlocking, the red LED flashes and the sensor can be adjusted with the remote control.



If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits. If you do not know the access code, **cut and restore the power supply**. During 1 minute you can access the sensor without introducing any access code.



To end an adjustment session, always lock the sensor.

When there are several sensors it is recommended to use a different access code for each sensor in order to avoid changing settings on all of them at the same time.

ADJUSTING ONE OR MORE PARAMETERS



CHECKING A VALUE



x = number of flashes = value of the parameter

 


DETECTION FIELD ADJUSTMENT




increase/decrease the detection field of 1cm.

TEACH-IN

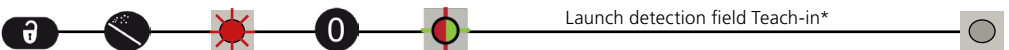

Launch detection field Teach-in*

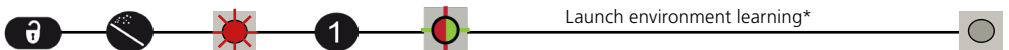 

Launch environment learning*

* refer to the teach-in process on page 6.

LED ACTIVATION/DEACTIVATION



enable/ disable the LED when there is a detection.

VISIBLE SPOTS



turn on/ off the visible spots.

SERVICE MODE



disable the output and LED for during 15 minutes and can be useful during an installation, a mechanical teach-in of the door or maintenance work.

RESET TO FACTORY SETTINGS



factory reset of all values.



factory reset of all values except field dimensions, output redirection and configuration.

TROUBLESHOOTING



In case of unwanted reactions of the door, verify whether the problem is caused by the sensor or the controller. To do so, activate the service mode (no safety) and launch a door cycle. If the door cycle is completed successfully, check the sensor. If not, verify the door controller or the wiring.



The RED or GREEN LED is ON sporadically or permanently and the door does not react as expected.	Bad teach-in	Launch a new teach-in.
	Unwanted detections (due to environment or external conditions)	1 Make sure the laser curtain at the correct position.
		2 Verify if the laser window is dirty and clean it carefully with a damp and clean microfibre cloth if necessary (attention: the surface of the laser window is delicate).
	3 Switch DIP 2 to off (critical environment).	



The sensor does not react at power-on.	Inverted power supply	Check wiring (green +, brown -).
	Faulty cable	Replace cable
	Faulty sensor	Replace sensor
The sensor does not react when powered.	Test error	Check voltage between red and blue wires.
	The service mode is activated.	Exit the service mode.



It is not possible to adjust a setting with the remote control.	Wrong DIP-switch position.	Adjust the required DIP-switches to ON.
	The sensor is password protected	Enter the right password. If you forgot the code, cut and restore the power supply to access the sensor without entering a password during 1 minute.

TROUBLESHOOTING

	The ORANGE LED is on permanently.	The sensor encounters a memory problem.		Send the sensor back for a technical check-up.
	The ORANGE LED flashes quickly.	DIP-switch setting awaiting confirmation.		Confirm the DIP-switch setting: long push on the push button.
	The ORANGE LED flashes 1 x every 3 seconds.	The sensor signals an internal fault.		Cut and restore power supply. If orange LED flashes again, replace sensor.
	The ORANGE LED flashes 2 x every 3 seconds.	Power supply is out of limit.	1	Check power supply (tension, capacity).
			2	Reduce the cable length or change cable.
	The ORANGE LED flashes 3 x every 3 seconds.	The sensor signals an internal fault.		Cut and restore power supply. If orange LED flashes again, replace sensor.
	The ORANGE LED flashes 4 x every 3 seconds.	Something close to the sensor is masking part of the detection field.	1	Make sure the laser window is not scratched. If it is, replace sensor.
			2	Remove all masking elements (insects, spider web, flexible tube, laser window protection).
			3	Verify if the laser window is dirty and clean it with compressed air. Then wipe it carefully with a damp and clean microfibre cloth if necessary (attention: the surface of the laser window is delicate)
				The sensor does not see its background. Switch DIP 3 to off (deactivates background).
	The ORANGE LED flashes 5 x every 3 seconds.	Teach-in error	1	Check whether all teach-in requirements are fulfilled and launch a new teach-in.
			2	Adjust the tilt angle of the laser curtain and launch a new teach-in.
			3	Make sure there are no objects on the ground during teach-in and launch a new teach-in.
	The ORANGE LED flashes 6 x every 3 seconds.	Installation height higher than limitation.		Press the push button during at least 5 seconds to confirm the installation height of sensor is higher than 4m. Note that the sensor does not comply with DIN 18650-1 and EN 16005 above this height.

TECHNICAL SPECIFICATIONS

Technology	LASER scanner, time-of-flight measurement
Detection mode	Presence
Max. installation height	3.5 m (DIN 18650-1) 4m (EN 16005) 5m (with reflectivity of 8%)
Opening angle	90°
Angular resolution	0.23° (400 spots within 90°)
Testbody	700 mm x 300 mm x 200 mm (testbody CA according to EN 16005 & DIN 18650-1 < 4 m) 50mm cylinder (testbody CB according to DIN 18650-1 < 3.5 m)
Optical characteristics IEC/EN 60825-1	Wavelength 905 nm; average output power 0.05 mW ; CLASS 1 Wavelength 650 nm; max. output CW power 3 mW ; CLASS 3R - visible spot
Supply voltage	12-24V DC ± 15%
Power consumption	≤ 2.2 W
Response time	Max. 90 ms
Output	1 optocoupler (galvanic isolation - polarity free) Max. switching voltage: 42V AC / 60V DC Max. switching current: 100 mA 1 Relay (free of potential change-over contact) Max. contact voltage: 60V AC / 125V DC Max. contact current: 1.0A (resistive) Max. switching power: 30W (DC) / 60VA (AC)
LED-signals	1 bi-coloured LED: detection/output status
Dimensions	178 mm (L) × 85 mm (H) × 53 mm (D)
Material - Colour	PC/ABS - Black
Tilt angles	0° to +5°
Protection degree	IP54 (IEC/EN 60529)
Temperature range	-30°C to +60°C if powered
Humidity	0-95 % non-condensing
Vibrations	< 2 G
Compliance	EN 16005 Chapter 4.6.8 (testbody CA / installation height < 4 m) DIN 18650-1 Chapter 5.7.4 (testbody CA & testbody CB / installation height < 3.5 m) EN 12978 EN ISO 13849-1 PL "d" / CAT2 IEC/EN 60825-1 IEC/EN 61508 SIL2

Specifications are subject to change without prior notice. All values are measured in specific conditions.

BEA SA | LIEGE Science Park | ALLÉE DES NOISETIERS 5 - 4031 ANGLEUR [BELGIUM] | T +32 4 361 65 65 | F +32 4 361 28 58 | INFO@BEA.BE | WWW.BEA-SENSORS.COM



BEA hereby declares that the equipment type Flatscan REV-PZ is in compliance with European Directives 2006/42/EC (Machinery), 2011/65/EU (RoHS) and 2014/30/EU (EMC). The full text of the EU declaration of conformity is available on our website



Notified Body for EC-type inspection: 0044 - TÜV NORD CERT GmbH, Langemarkstr. 20, D-45141 Essen
EC-type examination certificate number: 44 205 16129701

This product should be disposed of separately from unsorted municipal waste

