



Quick Start






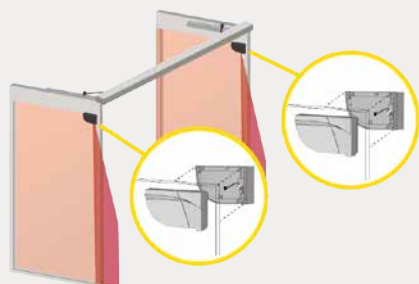










SLAVE

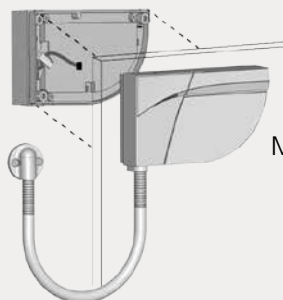








MASTER

1 MOUNTING ON DOOR

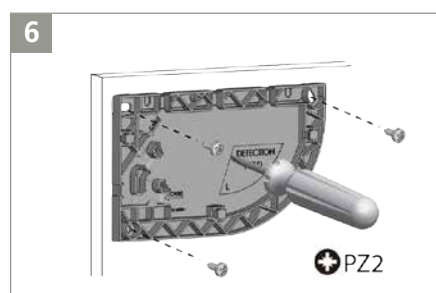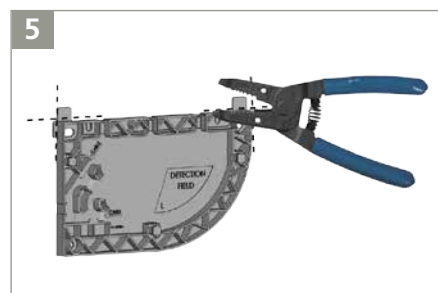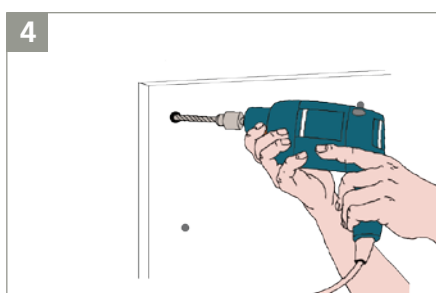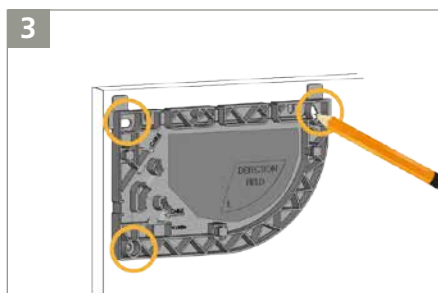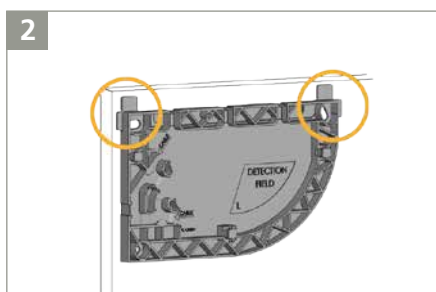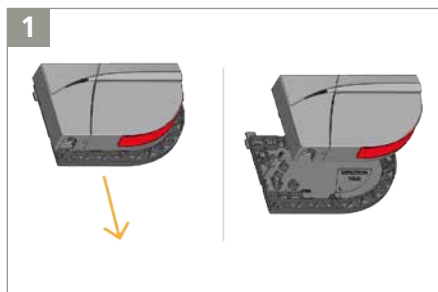


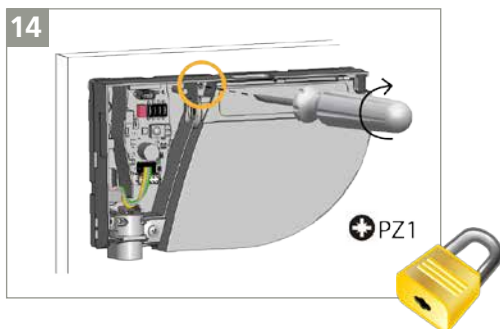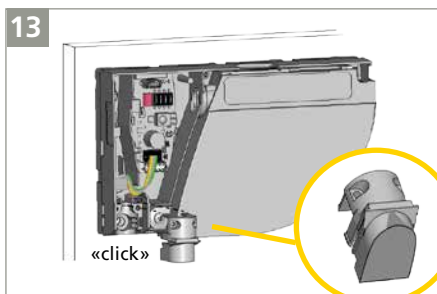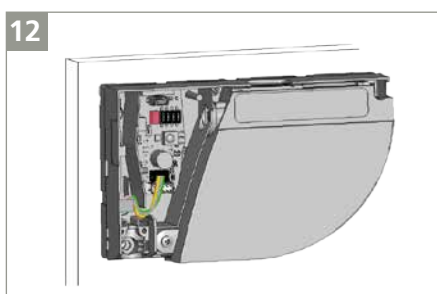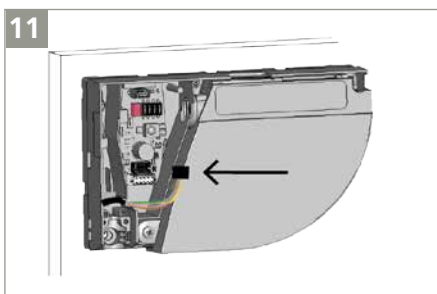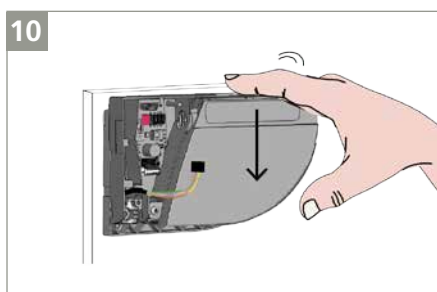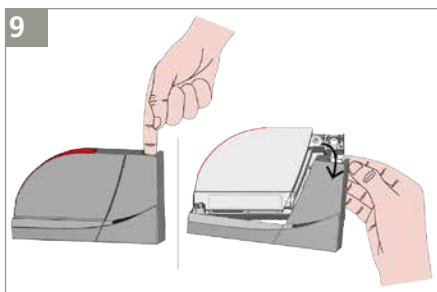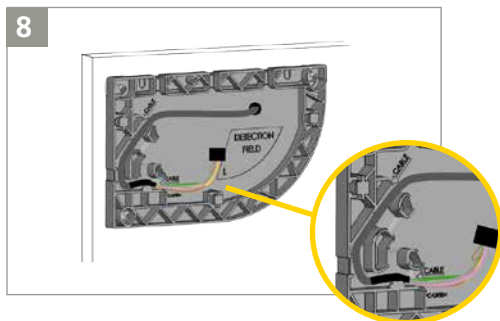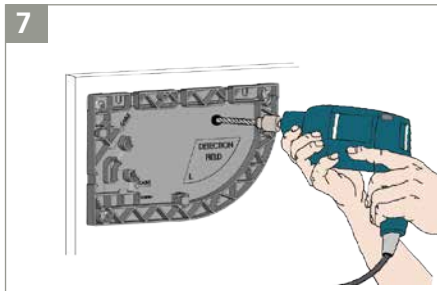


2 WIRING TO DOOR CONTROLLER

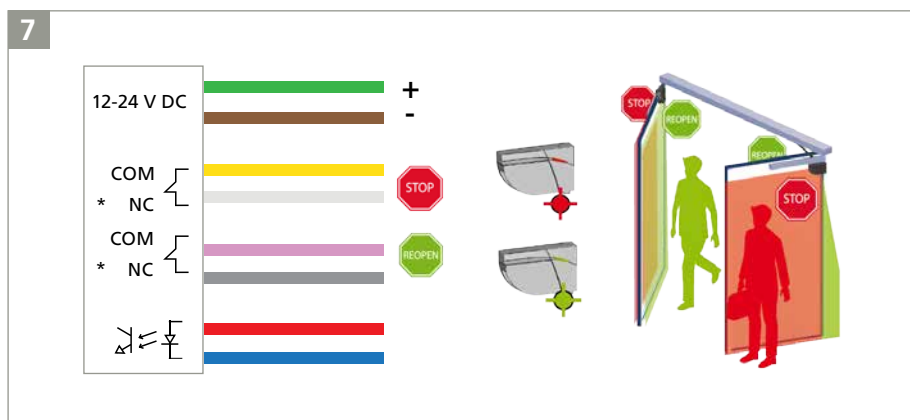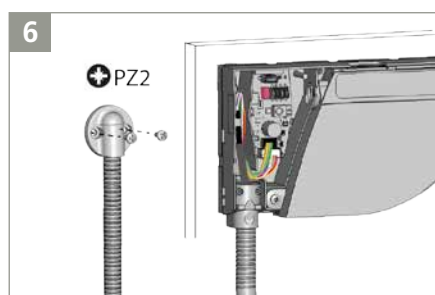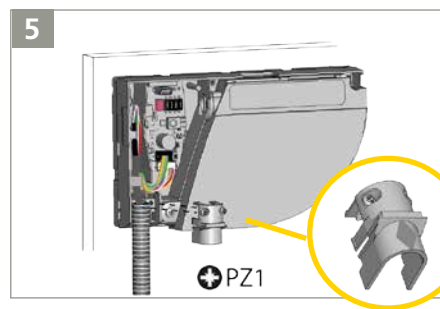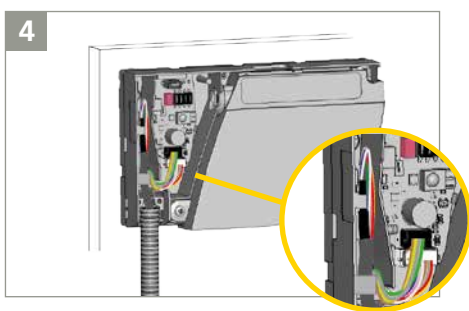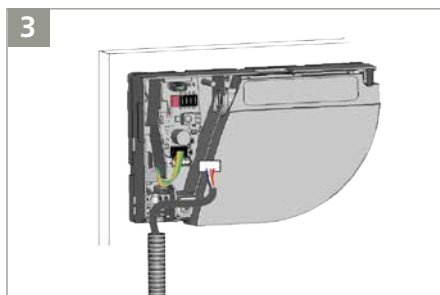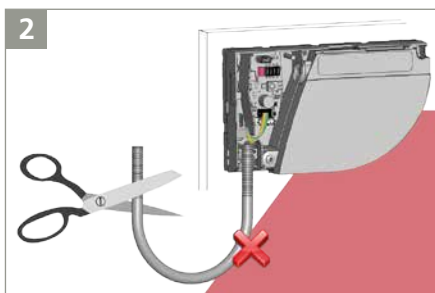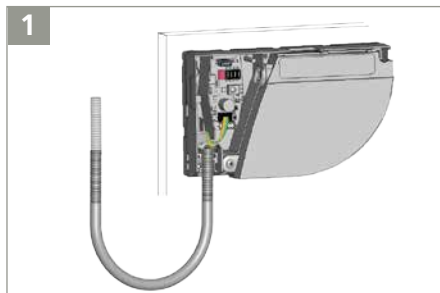


3 DIP1

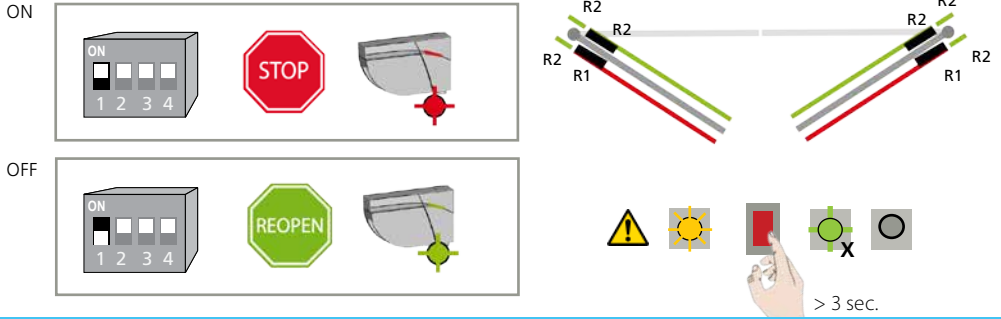

4 TEACH-IN

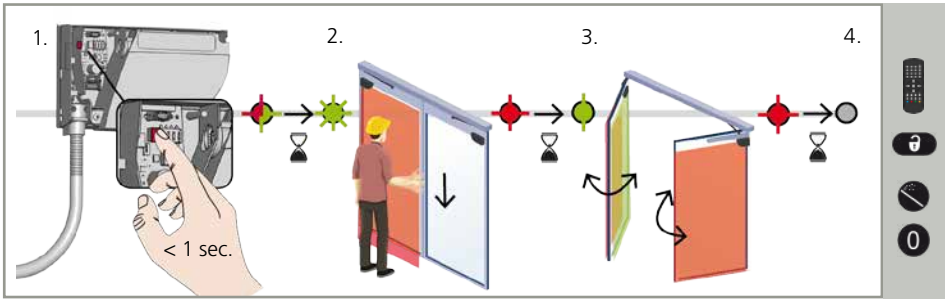

5 TEST + ADJUSTMENTS

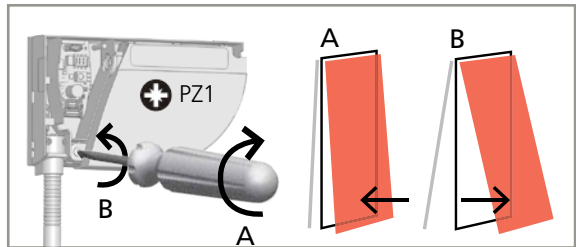

⚠ Start new TEACH-IN

6 FINAL STEPS

