

IXIO-D01 I

OPENING & PRESENCE SENSOR FOR AUTOMATIC INDUSTRIAL DOORS


User's Guide for software version 0501 and higher
(refer to tracking label on product)



Download the BEA DECODER app for a quick overview of settings



DESCRIPTION

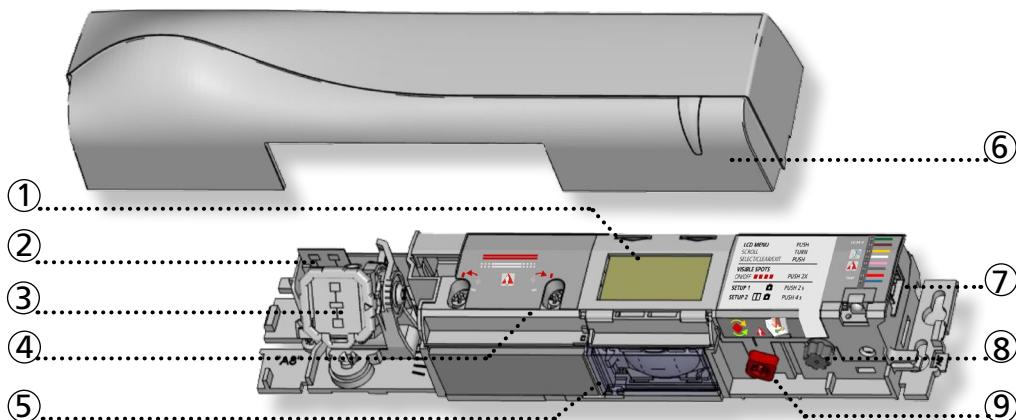


- | | | | |
|----|------------------------------|----|----------------------------------|
| 1. | LCD | 6. | cover |
| 2. | radar antenna (narrow field) | 7. | main connector |
| 3. | radar antenna (wide field) | 8. | main adjustment knob |
| 4. | IR-curtain width adjustment | 9. | IR-curtain angle adjustment knob |
| 5. | IR-lenses | | |

ACCESSORIES




BA: Bracket accessory

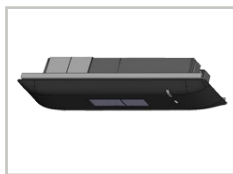

CA: Ceiling accessory



RA: Rain accessory

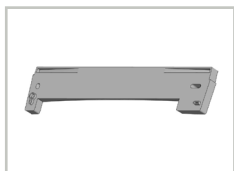




CDA: Curved door accessory





9 V battery

HOW TO USE THE LCD?



DISPLAY DURING NORMAL FUNCTIONING

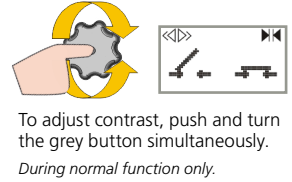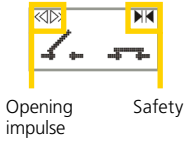



FACTORY VALUE VS. SAVED VALUE

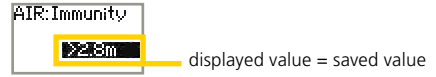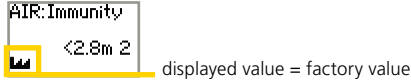


NAVIGATING IN MENUS

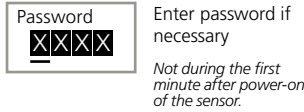

CHANGING A VALUE

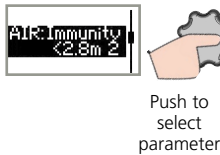

CHANGING A ZIP CODE




Validate the last digit in order to activate the new ZIP code:
- v = valid ZIP code, values will be changed accordingly
- x = invalid ZIP code, no values will be changed
- v/x = valid ZIP code, but from a different product.
Only available values will be changed.

VALUE CHECK WITH REMOTE CONTROL




Pressing a parameter symbol on your remote control, displays the saved value directly on the LCD-screen.
Do not unlock first.

1 MOUNTING & WIRING

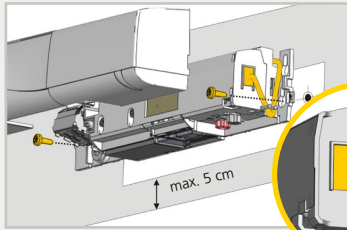


Fixation is compatible with the ACTIV8.

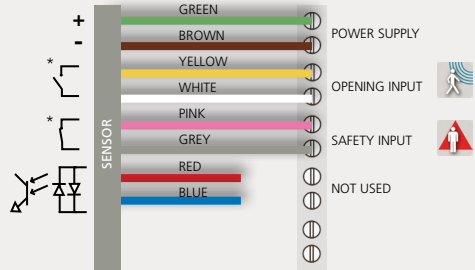


* Depending on OUTPUT CONFIGURATION settings

2 RADAR OPENING IMPULSE FIELD

ANGLE

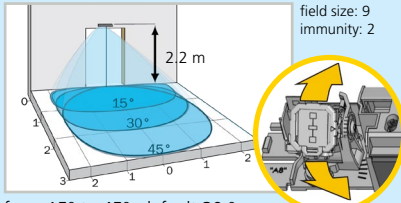


from 15° to 45°, default 30°

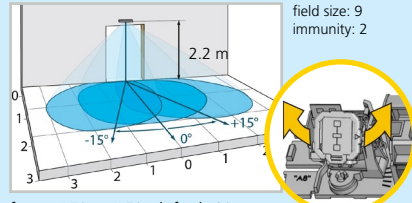


from -15° to 15°, default 0°

WIDTH

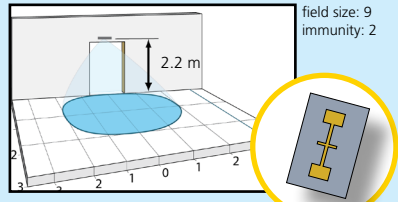

4 m x 2 m (wide)

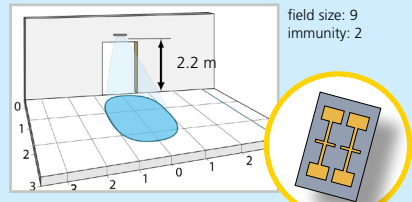


2 m x 2.5 m (narrow)


The size of the detection field varies according to the mounting height of the sensor.

3 INFRARED SAFETY FIELD


ANGLE

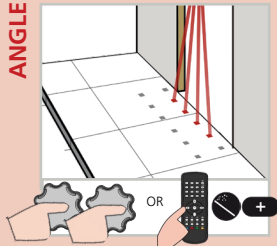

Activate the visible* spots to verify the position of the IR-curtain.

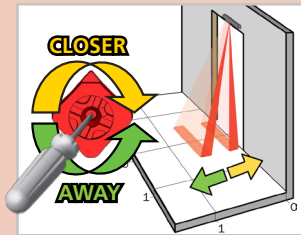


If necessary, adjust the IR-curtain angle (from -7° to 4° , default 0°).

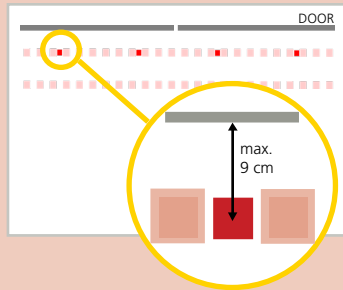


* Visibility depends on external conditions. When spots are not visible, use the Spotfinder to locate the curtains.

WIDTH

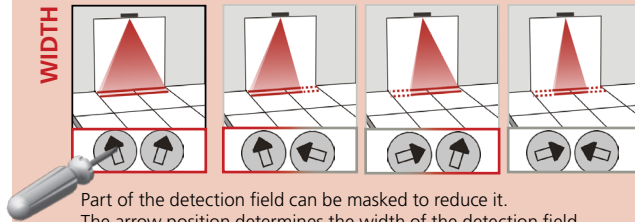

Part of the detection field can be masked to reduce it. The arrow position determines the width of the detection field.

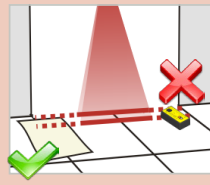

Always verify the actual detection field width with a piece of paper and not the Spotfinder, which detects the whole emitted field.

Additional adjustments are possible by LCD or remote control (see p. 5)

The size of the detection field varies according to the mounting height and the settings of the sensor. The full door width must be covered.

4 SETTINGS

Choose one of the following presets or adjust the sensor manually (see p.5):

STANDARD: standard in- and outdoor installations

CRITICAL ENVIRONMENT: critical installations due to surroundings or weather

SHOPPING STREET: installations in narrow streets with pedestrian traffic



Presettings: Standard 1

Presettings: Critical env. 2

Presettings: Shopping str. 3

5 SETUP



STEP OUT OF THE INFRARED FIELD!

SETUP 1 (QUICK)

reference picture



2 s



SETUP 2 (ASSISTED)

test of full door cycle + reference picture



4 s



TEST THE GOOD FUNCTIONING OF THE INSTALLATION BEFORE LEAVING THE PREMISES!

OVERVIEW OF SETTINGS

BASIC



Back
More

PRESETTINGS

standard

critical env.

shopping street

factory values for radar immunity, IR immunity, IR number and redirection
increased immunities, 1 curtain
increased immunities, redirection = motion and presence

RAD: FIELD SIZE

small > > > > > > > large

IR: IMMUNITY

↑ < 2.8 m ↓ > 2.8 m
low normal high higher highest normal high

IR: FREQUENCY

A B Sensors mounted close to each other should have a different frequency.

More
Back

ADVANCED



Back
More

factory value

RAD: IMMUNITY

low > > > > > > high

RAD: DIRECTION

bi uni uni PRM uni bi uni PRM uni PRM
AWAY shop shop AWAY shop PRM shop
PRM: for persons with reduced mobility
AWAY: unidirectional motion away from sensor
shop: automatic adaptation of field size (small shops)

RAD: HOLD TIME

0.5 s 1 s 2 s 3 s 4 s 5 s 6 s 7 s 8 s 9 s

RAD: OUTPUT

NO NC NO NC NO NO NO NC NO NO NO
NO: normally open
NC: normally closed
Inv.freq. Inv.freq. : frequency in detection (2.5 Hz)
**

IR: WIDTH

Always additionally adjust the arrow position on the sensor with a screwdriver.

IR: NUMBER

service mode 1 2 service mode = no IR detection during 15 minutes (maintenance).

IR: PRESENCE TIME

motion 15 s 30 s 1 min 2 min 5 min 10 min 20 min 60 min infinite

IR: OUTPUT

NO NC NO NC NO NO NO NO
NO: normally open
NC: normally closed

REDIRECTION

motion motion or presence motion and presence opening output is active in case of: 0 1 2
motion detection motion or presence detection motion and presence detection

FACTORY RESET

full reset partial reset partial: outputs are not reset

More
Back

DIAGNOSTICS



ZIP CODE



all parameter settings in zipped format (see application note on ZIP CODE)

ID

unique ID-number

ERROR LOG

last 10 errors + day indication

IR: SPOTVIEW

view of spot(s) that trigger detection

IR: C1 ENERG

signal amplitude received on curtain 1

IR: C2 ENERG







signal amplitude received on curtain 2

- POWERSUPPLY
- OPERATINGTIME
- RESET LOG
- PASSWORD
- LANGUAGE
- ADMIN


supply voltage at power connector
power duration since first startup
delete all saved errors
LCD and remote control password (0000= no password)
language of LCD-menu
enter code to access admin mode

** Only accessible via LCD


TROUBLESHOOTING

E1	 ORANGE LED flashes 1 x.	The sensor signals an internal fault.	<ol style="list-style-type: none"> 1 Replace sensor.
E2	 ORANGE LED flashes 2 x.	The power supply is too low or too high.	<ol style="list-style-type: none"> 1 Check power supply (in the diagnostics menu of the LCD). 2 Check wiring.
E4	 ORANGE LED flashes 4 x.	The sensor receives not enough IR-energy.	<ol style="list-style-type: none"> 1 Decrease the angle of the IR-curtains. 2 Increase the IR-immunity filter (values >2.8 m). 3 Deactivate 1 curtain.
E5	 ORANGE LED flashes 5 x.	The sensor receives too much IR-energy.	<ol style="list-style-type: none"> 1 Slightly increase the angle of the IR-curtains. 2 Decrease the IR-immunity filter (values 1-3 <2.8 m).
E8	 ORANGE LED flashes 8 x.	IR power emitter is faulty.	<ol style="list-style-type: none"> 1 Replace sensor.
	 ORANGE LED is on.	The sensor encounters a memory problem.	<ol style="list-style-type: none"> 1 Cut and restore power supply. 2 If orange LED lights up again, replace sensor.
	 RED LED flashes quickly after an assisted setup.	The sensor sees the door during the assisted setup.	<ol style="list-style-type: none"> 1 Move the IR-curtains away from the door. 2 Install the sensor as close to the door as possible. If needed, use a bracket accessory. 3 Launch a new assisted setup.
	 RED LED lights up sporadically.	The sensor vibrates.	<ol style="list-style-type: none"> 1 Check if the sensor is fastened firmly. 2 Check position of cable and cover.
		The sensor sees the door.	<ol style="list-style-type: none"> 1 Launch an assisted setup and adjust the IR angle.
		The sensor is disturbed by external conditions.	<ol style="list-style-type: none"> 1 Increase the IR-immunity filter to value 3. 2 Select presetting 2 or 3.
	 GREEN LED lights up sporadically.	The sensor is disturbed by rain and/or leaves.	<ol style="list-style-type: none"> 1 Select presetting 2 or 3. 2 Increase radar-immunity filter.
		Ghosting created by door movement.	<ol style="list-style-type: none"> 1 Change radar field angle.
		The sensor vibrates.	<ol style="list-style-type: none"> 1 Check if the sensor and door cover is fastened firmly. 2 Check position of cable and cover.
		The sensor sees the door or other moving objects.	<ol style="list-style-type: none"> 1 Remove the objects if possible. 2 Change radar field size or angle.
	 The LED and the LCD-display are off.		<ol style="list-style-type: none"> 1 Check wiring.
	The reaction of the door does not correspond to the LED-signal.		<ol style="list-style-type: none"> 1 Check output configuration setting. 2 Check wiring.
	The LCD or remote control does not react.	The sensor is protected by a password.	<ol style="list-style-type: none"> 1 Enter the right password. If you forgot the code, cut and restore the power supply to access the sensor without entering a password during 1 minute.

LED-SIGNAL

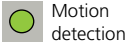


Motion detection




Presence detection




LED flashes

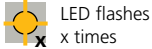

LED flashes
x times

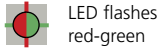

LED flashes
red-green




LED flashes
quickly




LED is off


INSTALLATION

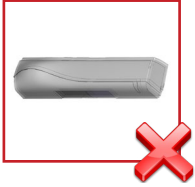


The sensor should be fixed firmly to avoid extreme vibrations.

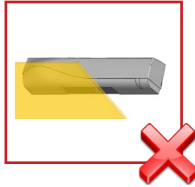

Do not cover the sensor.

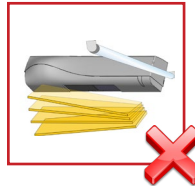


Avoid moving objects and light sources in the detection field.

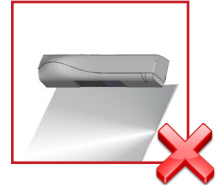

Avoid highly reflective objects in the infrared field.

MAINTENANCE

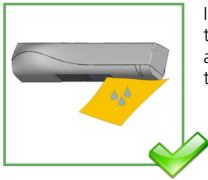


It is recommended to clean the optical parts at least once a year or more if required due to environmental conditions.



Do not use aggressive products to clean the optical parts.

SAFETY

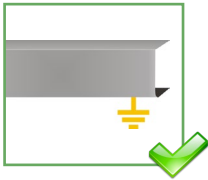


The door control unit and the door cover profile must be correctly earthed.



Only trained and qualified personnel may install and setup the sensor.



Always test the good functioning of the installation before leaving the premises.

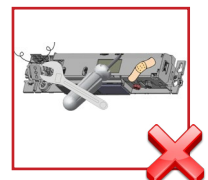

The warranty is invalid if unauthorized repairs are made or attempted by unauthorized personnel.



- The device cannot be used for purposes other than its intended use. All other uses cannot be guaranteed by the manufacturer of the sensor.
- The manufacturer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety.
- The manufacturer of the sensor cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.

TECHNICAL SPECIFICATIONS

Supply voltage:	12 V - 24 V AC +/-10% ; 12 V - 30 V DC +/-10%	* The Equipment must be powered by a SELV limited power source ensuring double insulation between primary voltages and the Equipment supply. The supply current should be limited to max 3A.
Power consumption:	< 2.5 W	
Mounting height:	2 m to 4 m	
Temperature range:	-25°C to +55°C; 0-95% relative humidity, non condensing	
Degree of protection:	IP54	
Noise:	< 70 dB	
Expected lifetime:	20 years	



Detection mode:	Motion Min. detection speed: 5 cm/s	Presence Typical response time: < 200 ms (max. 500 ms)
Technology:	Microwave doppler radar Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm ²	Active infrared with background analysis Spot: 5 cm x 5 cm (typ) Number of spots: max. 24 per curtain Number of curtains: 2

Specifications are subject to changes without prior notice.
 All values are measured in specific conditions and with a temperature of 25°C.



BEA hereby declares that the IXIO-DO1 I is in conformity with European directives 2014/53/EU (RED) and 2011/65/EU (RoHS).



The complete declaration of conformity is available on our website.



This product should be disposed of separately from unsorted municipal waste